 
 



STORAGE

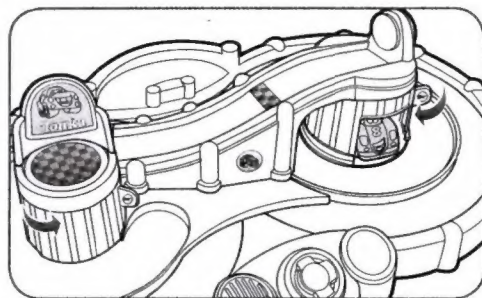

- After play, racecars can be placed in the storage chambers below the winner's circle platform and the ramp; slide storage chamber doors closed to prevent cars from falling out while transporting racetrack.

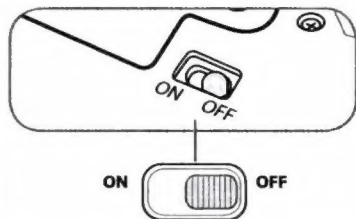

 - Slide switch on bottom of racetrack to "OFF" to prevent accidental activation of spinning and sounds.

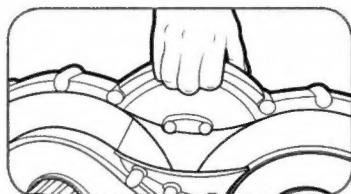

- Use the built-in handle to transport the racetrack as needed.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.

© 2006 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
Patent Pending.
09143 PN 6667260000



Questions? Call: 1-800-PLAYSKL

PLAYSKOOL

 
OVER 18 MONTHS
09143

Tonka®

Wheel Pals®

Speed 'n Go Funway™

Thank you for choosing this
TONKA toy!

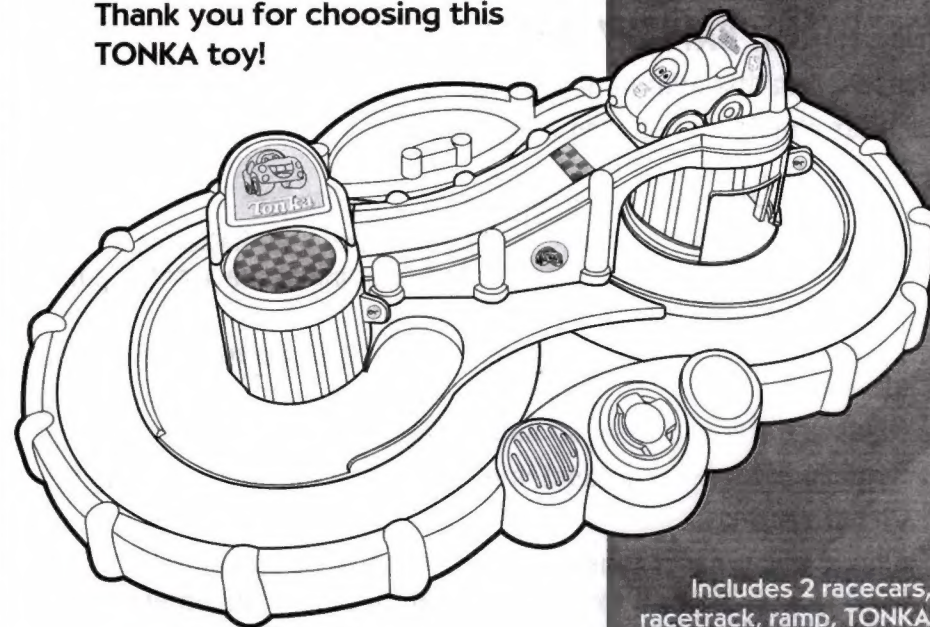

Includes 2 racecars,
racetrack, ramp, TONKA
flag and instructions.

x3 ALKALINE
BATTERIES
REQUIRED
1.5V C or LR14 size
NOT INCLUDED

 
Phillips/cross head screwdriver (not included)
needed to insert batteries.

**ADULT ASSEMBLY
REQUIRED**

TO INSTALL BATTERIES

NOTE: Install batteries before assembling racetrack.

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 3 x 1.5V "C" or LR14 size alkaline batteries. Replace cover and tighten screw.

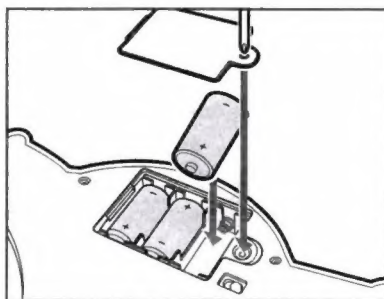

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

 
Please retain this information for future reference.

Batteries should be replaced by an adult.

⚠ CAUTION:


1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

ASSEMBLY

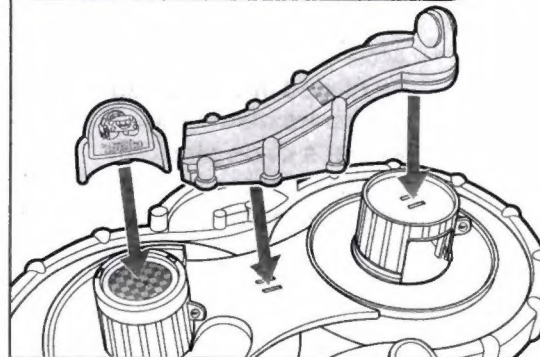


1. Attach ramp to racetrack as shown.
2. Attach TONKA flag to winner's circle platform as shown.

 TO PLAY

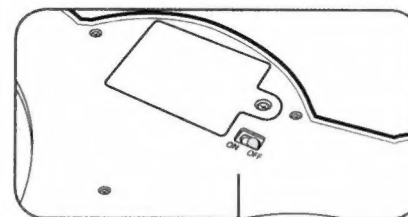


ON OFF

 1. Slide switch on bottom of racetrack to "ON."

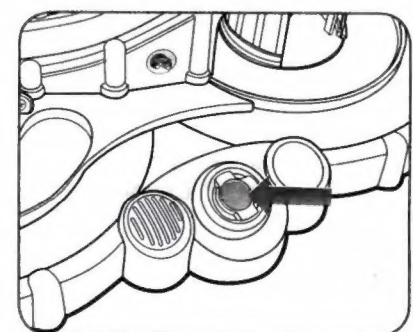

 2. Press large button to activate spinning racetrack and racing sounds.

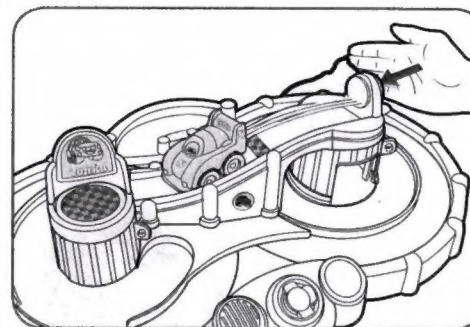

3. Put WHEEL PALS® racecar at the top of the ramp, then whack the ramp bumper to send the racecar speeding down onto the racetrack.